

RE-10 SERIES ROTARY EVAPORATOR MOTOR REPLACEMENT GUIDE


STEP 1: Remove the 4 screws on top of the motor housing.



STEP 2: Remove the 4 screws for the back plate.





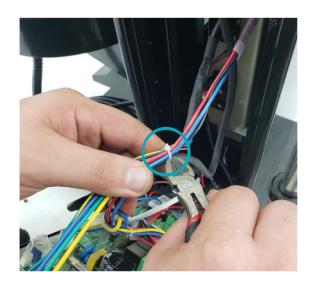

STEP 4: Disconnect the two connectors pictured below.



You can now remove the motor housing from the base. Once removed, you can re-install the motor and follow the steps in reverse.



If you have any questions or concerns, please sent us an email or give us a call at 734-855-4890 or sales@usalabequipment.com

