



CRX™ Filtration Media

Safety

SDS Sheets: Available upon request on all chemicals used in this process.

Preparation

Required Materials:

CRX™ Filtration Media

In-line Filtration Housing & Screen

- Size: for best results use a 3” to 4” diameter column that is between 8” to 12” tall.
- CRX™ works best with a 5 to 10 micron sintered mesh plate.
- CRX™ works best with a solvent ratio to biomass of 6:1 to 10:1.
- CRX™ works best at temperatures below -10°C.

Procedure

1. Load 150-250 grams of filter media into filtration housing for every 1 lbs of biomass. The media quantity used is dependent on the quality of the biomass. Higher quality biomass requires less media. Lower quality biomass requires more media. The lookup table can be used as a reference:

Biomass	CRX™ Media use based on grade		
	Low Grade	Medium Grade	High Grade
1 lb	250g	200g	150g
2 lbs	500g	400g	300g
5 lbs	1,250g	1,000g	750g
10 lbs	2,500g	2,000g	1,500g
15 lbs	3,750g	3,000g	2,250g
20 lbs	5,000g	4,000g	3,000g
25 lbs	6,250g	5,000g	3,750g

2. Ensure that media is secured in filtration housing.
 - a. Ensure the 5 to 10 micron screen is installed.
3. CRX™ does not need to be wetted prior to use.
4. Run filtration using hydrocarbon based solvent.
 - a. Avoid saturation and maintain flow.
5. Follow disposal instructions in SDS.

Contact info@mediabros.store for additional information and questions.

SAFETY DATA SHEET

SECTION 1 - PRODUCT AND COMPANY IDENTIFICATION

PRODUCT NAME: CRX - Filter Media
PRODUCT SYNONYM(s): Bentonite, Bentonite Clay
CAS NUMBER: 1302-78-9
RECOMMENDED USE: Adsorbent, Filtration
SUPPLIER/MANUFACTURER'S NAME: Media Bros LLC
ADDRESS: 866 North Columbia Blvd Ste B103, Portland, Oregon 97217
EMERGENCY PHONE: +1 (800) 424-9300, Chemtrec (US and Canada)

DATE OF PREPARATION: January 01, 2020
DATE OF LAST REVISION: April 01, 2020

SECTION 2 - HAZARDS IDENTIFICATION

Classification of the mixture

This product does meet the definition of a hazardous substance or preparation as defined by 29 CFR 1910. 1200 and WHMIS 2015.

Component(s) Contributing to Classification(s)

Silica

GHS Label elements, including precautionary statements

Pictogram(s):



Signal Word:

Danger!

GHS Hazard Classification(s):

Carcinogenicity Category 1

Specific Target Organ Toxicity – Repeated Exposure Category 1 (Inhalation)

Hazard Statement(s):

H350: May cause cancer

H372: Causes damage to organs through prolonged or repeated exposure.

Prevention Statement(s):

P201: Obtain special instructions before use.

P202: Do not handle until all safety precautions have been read and understood.

P260: Do not breathe dust/fume/gas/mist/vapours/spray.

P264: Wash skin thoroughly after handling.

P270: Do not eat, drink or smoke when using this product.

P280: Wear protective gloves/protective clothing/eye protection/face protection.

Response Statement(s):

P308+P313: IF exposed or concerned: Get medical advice/attention.

P314: Get medical advice/attention if you feel unwell.

Storage Statement(s):

P405: Store locked up.

Disposal Statement(s):

P501: Dispose of contents/container in accordance with local/regional/national/international regulations.

Other Hazards

None applicable.

SAFETY DATA SHEET

SECTION 3 - COMPOSITION and INFORMATION ON INGREDIENTS

HAZARDOUS INGREDIENTS:	CAS #	WT %	GHS CLASSIFICATION
Silica	14808-60-7	1-10%	STOT RE 1, CARC CAT 1

Additional Information: See SECTION 16 for full classification phrases. Exact concentrations are withheld as trade secret.

SECTION 4 - FIRST-AID MEASURES

Description of first aid measures

Contaminated individuals of chemical exposure must be taken for medical attention if any adverse effect occurs. Rescuers should be taken for medical attention, if necessary. Take copy of label and SDS to health professional with contaminated individual.

EYE CONTACT: If product enters the eyes, open eyes while under gentle running water for at least 15 minutes. Seek medical attention if irritation persists.

SKIN CONTACT: Wash skin thoroughly after handling. Seek medical attention if irritation develops and persists. Remove contaminated clothing. Launder before re-use.

INHALATION: If breathing becomes difficult, remove victim to fresh air. If necessary, use artificial respiration to support vital functions. Seek medical attention.

INGESTION: If product is swallowed, call physician or poison control center for most current information. If professional advice is not available, do not induce vomiting. Never induce vomiting or give diluents (milk or water) to someone who is unconscious, having convulsions, or who cannot swallow. Seek medical advice. Take a copy of the label and/or SDS with the victim to the health professional.

Most important symptoms and effects, both acute and delayed

Dust may cause mechanical eye irritation. Contains a chemical which is documented as a cancer hazard.

Medical conditions aggravated by exposure:

This material or its emissions may aggravate pre-existing disorders involving any target organs mentioned in this Safety Data Sheet as being at risk.

Indication of immediate medical attention and special treatment needed

Treat symptoms and reduce over-exposure.

SECTION 5 - FIRE-FIGHTING MEASURES

Flash Point

Product is noncombustible.

Extinguishing media

Water, Dry powder / dry sand, alcohol-resistant foam, dry chemical or CO₂.

Specific hazards arising from the chemical

None known.

Explosion Sensitivity to Mechanical Impact:

Not Sensitive.

Explosion Sensitivity to Static Discharge:

Not Sensitive.

Minimum Ignition Energy (M.I.E.):

No Data at this time

Special firefighting Procedure

Incipient fire responders should wear eye protection. Structural firefighters must wear Self-Contained Breathing Apparatus and full protective equipment. Isolate materials not yet involved in the fire and protect personnel. Move containers from fire area if this can be done without risk; otherwise, cool with carefully applied water spray. If possible, prevent runoff water from entering storm drains, bodies of water, or other environmentally sensitive areas.

SECTION 6 - ACCIDENTAL RELEASE MEASURES

Spill:

Sweep or vacuum material. Transfer to secondary container to be properly disposed or re-used.

SAFETY DATA SHEET

Environmental precautions

Do not let product enter drains, do not allow to sewers/surface or ground water. See Section 12, Ecological information.

Methods and material for containment and cleaning up

Pick up released product with appropriate implements & return to original container if reusable, or dispose. Dispose of in accordance with applicable Federal, State, and local procedures (see Section 13, Disposal Considerations).

SECTION 7 - HANDLING and STORAGE

General Procedures:

Do not eat, drink or smoke when using this product. Wash hands before breaks and at the end of workday. Keep away from food, drink and animal feeding stuffs.

Handling:

Avoid dust formation. Provide sufficient air exchange and/or exhaust in work rooms. In case of insufficient ventilation, wear suitable respiratory equipment. For personal protection see section 8. Handle and open container with care. If you require advice on safe handling techniques or specific uses, please contact your supplier or check the further information referred to in section 16.

Storage:

Keep only in the original container. Keep containers tightly closed in a cool, well-ventilated place.

Specific end uses

Adsorbent, filter aid

SECTION 8 - EXPOSURE CONTROLS - PERSONAL PROTECTION

Control parameters

EXPOSURE LIMITS/GUIDELINES:

Chemical Name	CAS#	ACGIH	OSHA
Silica	14808-60-7	0.025 mg/m ³	0.05 mg/m ³

Exposure Controls

Currently, International exposure limits are established for the components of this product. Please check with competent authority in each country for the most recent limits in place.

VENTILATION AND ENGINEERING CONTROLS: Use with adequate ventilation to ensure exposure levels are maintained below the limits provided below. Use local exhaust ventilation to control airborne dust. Ensure eyewash/safety shower stations are available near areas where this product is used.

The following information on appropriate Personal Protective Equipment is provided to assist employers in complying with OSHA regulations found in 29 CFR Subpart I (beginning at 1910.132) or equivalent standard of Canada, or standards of EU member states (including EN 149 for respiratory PPE, and EN 166 for face/eye protection), and those of Japan. Please reference applicable regulations and standards for relevant details.

RESPIRATORY PROTECTION: Maintain airborne contaminant concentrations below guidelines listed above, if applicable.

If necessary, use only respiratory protection authorized in the U.S. Federal OSHA Respiratory Protection Standard (29 CFR 1910.134), equivalent U.S. State standards, Canadian CSA Standard Z94.4-93, the European Standard EN149, or EU member states.

EYE PROTECTION: Safety glasses are required. If necessary, refer to U.S. OSHA 29 CFR 1910.133 or appropriate Canadian Standards.

HAND PROTECTION: Use protective gloves as appropriate to minimize skin contact. If necessary, refer to U.S. OSHA 29 CFR 1910.138 or appropriate Standards of Canada.

BODY PROTECTION: Use body protection appropriate to prevent contact (e.g. lab coat, overalls). If necessary, refer to appropriate Standards of Canada, or appropriate Standards of the EU, Australian Standards, or relevant Japanese Standards.

SECTION 9 - PHYSICAL and CHEMICAL PROPERTIES

Information on basic physical and chemical properties

PHYSICAL STATE:	Solid (granules)
ODOR:	Odorless
ODOR THRESHOLD (PPM):	Not Available
APPEARANCE / COLOR:	Beige granules

SAFETY DATA SHEET

pH:	6-8
MELTING / FREEZING POINT (F°):	Not Applicable
BOILING POINT (F°):	Not Applicable
FLASH POINT (F°):	Not Applicable
EVAPORATION RATE (nBuAc = 1):	Not Available
FLAMMABILITY (solid, gas):	Not Applicable
FLAMMABLE LIMITS (in air by volume, %):	Not Applicable
VAPOR PRESSURE (mmHg):	Not Applicable
VAPOR DENSITY (AIR=1):	Not Applicable
RELATIVE DENSITY	Not Available
SOLUBILITY IN WATER (%)	Insoluble
PARTITION COEFFICIENT: N-OCTANOL/WATER:	Not Applicable
AUTOIGNITION TEMPERATURE:	Not Applicable
DECOMPOSITION TEMPERATURE:	Not Applicable
VISCOSITY:	Not Applicable
EXPLOSIVE PROPERTIES:	Not Applicable
OXIDISING PROPERTIES:	Not Applicable
Other Information	
SPECIFIC GRAVITY 4°C: (Water = 1)	2.2
DENSITY:	0.5 - 0.7 g/cm ³
VOC:	Not Applicable
WEIGHT PER GALLON:	Not Applicable

SECTION 10 - STABILITY and REACTIVITY

Reactivity: No data is available.

Chemical Stability: Product is stable under recommended storage conditions.

Possibility of Hazardous Reactions: No data available.

Conditions to avoid: No data available.

Incompatible materials: No data available.

Hazardous Decomposition Products: No data available.

SECTION 11 - TOXICOLOGICAL INFORMATION

Information on Toxicological Effects

TOXICITY DATA: No data available.

POTENTIAL HEALTH HAZARDS OR RISKS FROM EXPOSURE:

IRRITANCY OF PRODUCT: Exposure with this product can be irritating when exposed to eyes, nose, and throat.

SENSITIZATION OF PRODUCT: This product is not considered a skin sensitizer.

CARCINOGENICITY: None

GERM CELL MUTAGENICITY INFORMATION: This product does not contain components which are documented as Germ Cell Mutagenicity hazards.

REPRODUCTIVE TOXICITY INFORMATION: This product does not contain components which are documented as reproductive hazards.

SPECIFIC TARGET ORGAN TOXICITY – SINGLE EXPOSURE: No specific data available for this product.

SPECIFIC TARGET ORGAN TOXICITY – REPEATED EXPOSURE: No specific data available for this product.

ASPIRATION HAZARD This product is not anticipated to be an aspiration hazard.

SECTION 12 - ECOLOGICAL INFORMATION

ALL WORK PRACTICES MUST BE AIMED AT ELIMINATING ENVIRONMENTAL CONTAMINATION.

Toxicity

LC50 – No data available.

EC50 - No data available.

Persistence and degradability

No specific data available on this product.

SAFETY DATA SHEET

Bioaccumulative potential

No specific data available on this product.

Mobility in soil

No specific data available on this product.

Results of PBT and vPvB assessment

No specific data available on this product.

Other adverse effects

No specific data available on this product.

SECTION 13 - DISPOSAL CONSIDERATIONS

PRODUCT DISPOSAL: Unused material is suitable for disposal in a sanctioned landfill. Used material subject to local regulation. Please be advised that state and local requirements for waste disposal may be more restrictive or otherwise different from federal laws and regulations. Consult state and local regulations regarding the proper disposal of this material.

COMMENTS: The generation of waste should be avoided or minimized wherever possible. Avoid dispersal of spilled material and runoff and contact with soil, waterways, drains and sewers. Disposal of this product, solutions and any by-products should at all times comply with the requirements of environmental protection and waste disposal legislation and any regional/local authority requirements.

SECTION 14 - TRANSPORTATION INFORMATION

US DOT/IMDG/IATA:

PROPER SHIPPING NAME: Not Regulated

HAZARD CLASS NUMBER and DESCRIPTION: N/A

UN IDENTIFICATION NUMBER: N/A

PACKING GROUP: N/A

DOT LABEL(S) REQUIRED: N/A

NORTH AMERICAN EMERGENCY RESPONSE GUIDEBOOK NUMBER (2016): N/A

MARINE POLLUTANT: Ingredients are not classified by the DOT as a Marine Pollutant (as defined by 49 CFR 172.101, Appendix B)

SECTION 15 - REGULATORY INFORMATION

Safety, health and environmental regulations/legislation specific for the substance or mixture**UNITED STATES REGULATIONS**

SARA REPORTING REQUIREMENTS: This product is not subject to the reporting requirements of Sections 302, 304 and 313 of Title III of the Superfund Amendments and Reauthorization Act.

TSCA: All components in this product are listed on the US Toxic Substances Control Act (TSCA) inventory of chemicals.

SARA 311/312:

Acute Health: Yes Chronic Health: Yes Fire: No Reactivity: No

U.S. CERCLA REPORTABLE QUANTITY (RQ):

CERCLA Reportable Quantity RQ: None

CLEAN WATER ACT:

None of the chemicals in this product are listed as Hazardous Substances under the CWA.

STATE REGULATIONS:**CALIFORNIA SAFE DRINKING WATER AND TOXIC ENFORCEMENT ACT (PROPOSITION 65):**

WARNING! This product can expose you to Quartz, which is known to the State of California to be a to cause cancer. For more information, go to WWW.P65Warning.ca.gov.

CANADIAN REGULATIONS:

CANADIAN DSL/NDL INVENTORY STATUS: All of the components of this product are on the DSL Inventory

CANADIAN ENVIRONMENTAL PROTECTION ACT (CEPA) PRIORITIES SUBSTANCES LISTS: No component of this product is on the CEPA First Priorities Substance Lists.

CANADIAN WHMIS CLASSIFICATION and SYMBOLS: This product is categorized as per WHMIS 2015 Controlled Product Regulations.


SAFETY DATA SHEET

SECTION 16 - OTHER INFORMATION

HMIS RATING

HEALTH	1
FLAMMABILITY	0
PHYSICAL HAZARD	0
PERSONAL PROTECTION	X

NFPA RATING

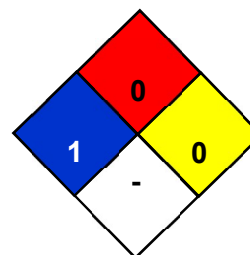

Caution: HMIS and NFPA ratings are based on a 0-4 rating scale

0= Minimal Hazard, 1= Slight, 2= Moderate, 3= High, 4= Extreme

GENERAL STATEMENTS:

Key or Legend to abbreviations and acronyms

- AIHA - American Industrial Hygiene Association
- ACGIH - American Conference of Governmental Industrial Hygienists
- CASRN - Chemical Abstract Services Registry Number
- CFR - Code of Federal Regulations
- D.O.T. - United States Department of Transportation
- IARC - International Agency for Research on Cancer
- OSHA - Occupational Safety and Health Administration
- NIOSH - National Institute for Occupational Safety and Health
- NTP - National Toxicology Program
- PPM - Parts per million
- mg/m³ - milligram per cubic meter
- kg - kilogram
- L or l - Liter
- n.o.s. - not otherwise specified
- Lbs. - Pounds
- mm²/s - millimeters squared per second
- PMCC - Pensky-Martens Closed Cup
- LC50 - Lethal Concentration 50 (concentration in water having a 50% chance of causing death to aquatic life)
- EC50 - Effective Concentration that causes 50% inhibition in growth or mobilization
- OECD - Organization for Economic Cooperation and Development
- SOCMI - Synthetic Organic Chemical Manufacturing Industry
- VOC - Volatile Organic Compound

PREPARED BY: Media Bros LLC

Disclaimer: Although reasonable care has been taken in the preparation of this document, we extend no warranties and make no representations as to the accuracy or completeness of the information contained therein, and assume no responsibility regarding the suitability of this information for the user's intended purposes or for the consequences of its use. Each individual should make a determination as to the suitability of the information for her/his particular purpose(s).

Revision History:
February 01, 2020

END OF SDS